
BAIT SAVIOUR SYSTEM

BAIT CONTAINER



OWNER'S GUIDE

PRESET TIMED RELEASE / WIRELESS CHARGING

START HERE

FOUR STEPS TO A TIMED RELEASE

Read the mounting, charging and care instructions before first use.

01

Check

Confirm the preset delay on the Control Box label and make sure the unit is charged.

02

Load

Put bait into the reusable bait bag and place the bag in the open container.

03

Close

Rotate the inner case shut. Closing starts the preset countdown.

04

Set

Secure the container in the pot with room to open and release the bait bag.

IN THIS GUIDE

Parts 03 / Mounting 04 / Timing 05 / Operation 06 / Charging 07 / Care 08 / Fault finding 09-10 / Warranty 11

KNOW THE PRODUCT

THE CONTAINER AND BAIT BAG

The case protects bait early in the soak, then opens to release the bait bag inside the pot.



OPEN BAIT CONTAINER

Lid cap • Control Box • Outer case • Rotating inner case



REUSABLE BAIT BAG

Fill the mesh bag with bait and place it inside the open case. Its tether helps position the bag. When the case opens, the bag drops into the pot so the bait can work later in the soak.

Keep fingers clear of the moving case when closing or testing it.

INSTALLATION

MOUNT INSIDE THE POT

Correct mounting lets the case move freely and drops the bait bag into the pot as intended.

BEFORE THE POT GOES DOWN

01 Choose the correct mount

Use the mounting video for your pot, creel or trap.


02 Fix the case securely

Position the container as shown for your pot style.

03 Check opening clearance

Leave room for the case to open and the bag to drop.

MOUNTING VIDEOS

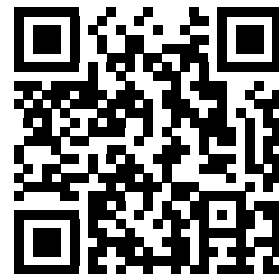

Scan for instructions by pot style

baitsaviour.com/support

TIMING

KNOW YOUR PRESET DELAY

Each Bait Container is programmed to the release delay chosen for that unit before delivery.

EXAMPLE ON THE LABEL

18H

ALSO: 5D = 5 DAYS

HOW THE CLOCK WORKS

The tag shows the number and unit together: 18H means 18 hours, while 5D means 5 days.

Closing starts the same preset countdown on each use. The delay is fixed for that unit and is not changed at sea.

Check the label before loading several units with different delays.

OPERATION

LOAD. CLOSE. RELEASE.

A simple repeatable sequence for each soak. Keep the case free of debris before closing.



01 / LOAD

Fill the reusable bait bag and place it in the open container.



02 / CLOSE

Rotate the inner case fully shut. This starts the preset timer.




03 / RELEASE

At the end of the delay, the case opens and the bag drops into the pot.

POWER


CHARGE THE CONTROL BOX

Remove the Control Box from the Bait Container and use the supplied wireless charger.

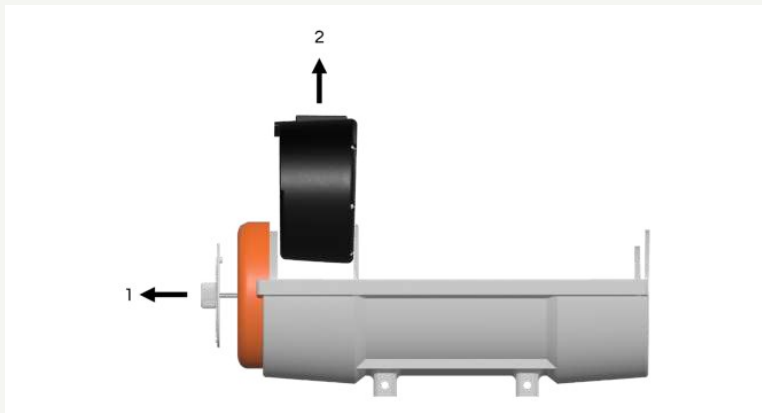

01 / REMOVE

Unscrew the upper lid part (1), then slide the Control Box out (2).

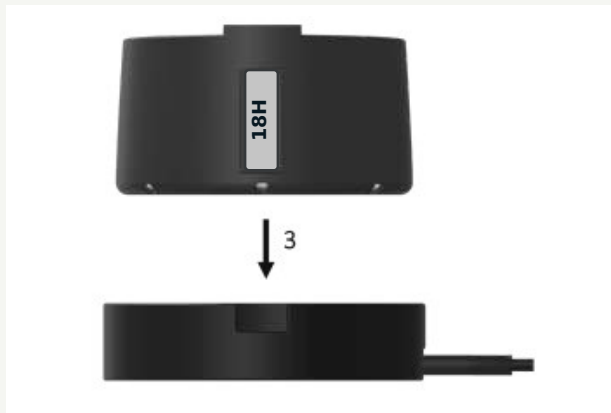

02 / PLACE ON CHARGER

Set the flat side down in the centre of the wireless charger.

The charger light turns blue while charging. Allow up to 8 hours for a full charge.

CARE

CARE, STORAGE AND DEPTH

Routine cleaning helps keep the case and lid moving freely in marine conditions.



CLEAN AROUND THE LID

Rinse away debris

From time to time, rinse under the lid and between the cases to remove build-up.

Store dry

For a long period out of the water, rinse off all salt water and store in a dry place.

Maximum depth: 183 m

Tested to 100 fathoms. Deeper use can cause Control Box failure and is excluded from the stated warranty.

CLOSING OR OPENING FAULTS

Check for a simple obstruction or low charge before contacting the team.

01

Will not close

Look for debris between the cases or under the lid. Remove it or rinse the unit in a bucket of clean water. A completely flat Control Box battery also prevents closing.

02

Will not stay closed

The unit is designed to release its closure at 15% battery or below. Charge the Control Box. As guidance, charge once it drops below 20%.

03

Does not open at the preset time

Check that mounting inside the pot leaves the case unobstructed and the bait bag free to drop. If the unit still fails after cleaning and charging, contact Bait Saviour support.

HELP

CHARGING AND FURTHER SUPPORT

Keep the charger and Control Box correctly centred when charging.


CONTROL BOX DOES NOT CHARGE

Check that the charger is powered and that the Control Box is placed flat side down in its centre.

Try another compatible wireless charging device on the charger. If that device also fails to charge, the charger may need replacing.

If the charger works but the Control Box still will not charge, contact the team.

INSTRUCTIONS BY POT STYLE

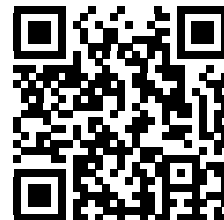

baitsaviour.com/support

NEED A HAND?

team@qleaptech.co.uk / www.baitsaviour.com

WARRANTY

12 MONTHS OF COVER

Warranty supplied with each item. Keep your purchase details and contact us if you find a fault.

COVERED

- Defects in materials used to manufacture the product
- Defects in workmanship under normal use
- Broken components under normal use

NOT COVERED

- Damage resulting from negligence
- Unauthorised product modification
- Damage caused by natural disaster
- Theft or loss of the product

Use beyond 183 m (100 fathoms) can cause Control Box failure and is outside the product warranty.



BAIT SAVIOUR

BAIT CONTAINER

Keep this guide with your fishing gear for setup, charging and fault finding.

www.baitsaviour.com / team@qleaptech.co.uk

Q-leap Technology LTD • Designed and assembled in the UK; made in China